



# Piezoresistive pressure transducer

Model 8515C -15, -50

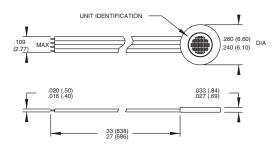

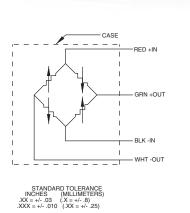

## **Key features**

- 15 and 50 psia ranges
- 200 mV full range
- Low profile, 0.030 inch thin
- Absolute reference

## **Description**

Model 8515C is a rugged, miniature, high sensitivity piezoresistive pressure transducer available in 15 and 50 psia full scale ranges. It is surface-mounted and measures 0.030 inch thin by 0.250 inch diameter (0.76 mm x 6.3mm). Full scale output is 200 mV with high overload capability, high frequency response, very low base strain sensitivity and excellent temperature performance.

Because of its very small size, model 8515C can be installed on curved surfaces with minimal effect on laminar air or hot gas flow. For a flush fit, 8515C and leadwires can be recessed into the mounting surface. A protective screen is provided to protect against particle impingement. 8515C is suitable for use on small-scale models in wind tunnel tests, as well as on aerodynamic surfaces during flight tests. Other uses include helicopter or turbine blade surface pressure measurements.

A rubber fairing, PN 30042, is an available accessory for airflow smoothing for flight test applications. Modified versions are available on special order for wider temperature compensation.

Recommended electronics for signal conditioning and power supply are the Endevco model 126 and 136 general purpose three channel conditioners, ultra low noise 4430A conditioner, or the 4990A-X (Oasis) multi-channel rack mount system.

## **Piezoresistive pressure transducer** | Model 8515C -15, -50

The following performance specifications conform to ISA-RP-37.2 (1964) and are typical values, referenced at  $+75^{\circ}F$  ( $+24^{\circ}C$ ) and 100 Hz, unless otherwise noted. Calibration data, traceable to National Institute of Standards and Technology (NIST), is supplied.

Dynamic characteristics	Units	-15	-50
Range [1]	psia	0–15	0–50
Positive sensitivity [2]	mV/psi typ (min)	13.3 (8.67)	4.0 (2.6)
Combined: non-linearity, non-repeatability,	1 21		
pressure hysteresis [3]	% FSO RSS max	0.5	0.5
Non-linearity, independent	% FSO typ	0.2	0.2
Non-repeatability	% FSO typ	0.1	0.1
Pressure hysteresis	% FSO typ	0.1	0.1
Zero measurand output [4] [5]	mV max	±20	±20
Zero shift after 3X range	% 3X FSO max	0.5	0.5
Thermal zero shift [6]			
from 0°F to +200°F (-18°C to +93°C), Ref to 75°F (24°C)	% FSO max	2.5	2.5
Thermal sensitivity shift [4] [6]			
from 0°F to +200°F (-18°C to +93°C), Ref to 75°F (24°C)	% max	3	3
Resonance frequency [7]	Hz	180 000	320 000
Non-linearity at 3X range	% 3X FSO	1	1
Thermal transient response per	psi/°F	0.003	0.005
ISA-S37.10, para. 6.7, procedure I [8]	po., .	0.000	0.000
Photoflash response	psi	0.25	0.8
Warm-up time [10]	ms	1	1
Acceleration sensitivity	psi/g	0.0002	0.0002
Burst pressure (diaphragm)	psia min	75	250
Base strain sensitivity at 250 microstrain	poid	, 0	200
Elastomer mounting [11]	psi	0.004	0.013
Rigid mounting [12]	psi	0.007	0.023
Electrical		0.007	0.020
Full scale output	200 mV typical (130 mV m	inimum) at 10 0 Vdc	
Supply voltage [13]	10.0 Vdc recommended, 12 Vdc maximum		
Electrical configuration	Active four-arm piezoresistive bridge		
Polarity	Positive output for increasing pressure		
Resistance	1 ositive output for mercus	mig pressure	
Input	2700 ohms typical, 2000 o	hms minimum	
Output	1500 ohms typical, 2200 ohms minimum		
Isolation	100 megohms minimum at 50 volts; leads to case, leads to shield, shield to case		
Noise	5 microvolts rms typical, dc to 50 000 Hz; 50 microvolts rms maximum, dc to 50 000 Hz		
Mechanical			
	Custalana at al 200 and a	CDEC	
Case material	Stainless steel 300 series CRES		
Cable, integral	4 conductor No. 36 AWG solid S.P.C., ETFE insulated		
Dead volume [7]	0.0004 cubic inches (0.0065 cc)		
Mounting [11] [14]	RTV bond to flat surface 0.08 gram (cable weighs 2.5 grams/meter)		

### Piezoresistive pressure transducer | Model 8515C -15, -50

Accessories			
Options	Description	8515C	
30042	Mounting pad	Optional	
EW862	4 conductor ribbon cable	Optional	

#### **Notes**

- 1. 1 psi = 6.895 kPa
- 2. A precise value for sensitivity is measured and provided for each unit.
- 3. FSO (Full Scale Output) is defined as transducer output from 0 to +FS, which is nominally 200 mV.
- 4. Tighter specifications are available on special order.
- 5. Zero Measurand Output (ZMO) is the transducer output with 0 psia applied.
- 6. Units can be compensated over any 200°F (93°C) span from -65°F to +250°F (-54°C to +121°C) on special order.
- 7. The cavity in the housing around the diaphragm may result in a low amplitude minor resonance near 70 kHz.
- 8. Significantly higher thermal transient errors occur if the excitation voltage exceeds 10 Vdc. For sensitive phase change studies, many users reduce the excitation voltage to 5 or even 1 volt.
- 9. Warm up time is defined as lapsed time from excitation voltage "turn on" until the transducer output is within 1% of reading accuracy.
- 10. Recommended mounting is .002 to .005 inch thickness of an RTV adhesive, such as Dow Corning Silastic® 738, or General Electric RTV 118.
- 11. Rigid mounting using cyanoacrylate adhesive. Use of a rigid adhesive makes removal without damage extremely difficult.
- 12. Use of excitation voltages above 10 Vdc requires manufacture and calibration at that voltage since thermal errors increase with high excitation voltages. If the unit is operated in a vacuum, excitation voltages above 10 volts may damage the unit.
- 13. Extreme care must be exercised in order to remove a mounted unit without damage. Use of solvents to remove the mounting adhesive may damage joints in the case of the unit.
- 14. Maintain high levels of precision and accuracy using Endevco's factory calibration services. Call Endevco's inside sales force at 866-ENDEVCO for recommended intervals, pricing and turn-around time for these services as well as for quotations on our standard products.
- 15. Model number defintion:

NOTE: Tighter specifications are available on special order.



10869 NC Highway 903, Halifax, NC 27839 USA

endevco.com | sales@endevco.com | 866 363 3826